


1. Choose a desired location for your canvas artwork and mark the two top edges with the pencil on the wall.
2. Measure the distance between the centers of the two mounting plates that are attached to the canvas artwork.
3. Level and drill two 5/16" diameter holes in the wall 1 1/4" down from where you want the top edge of the canvas artwork to be and spaced apart at the distance measured in Step 2. The holes must be level.
4. Use the 1" screws and plastic anchors provided to attach the two wall brackets at these holes so that the flanged ends of the brackets face up and away from the wall. Do not over tighten the screws.
5. Hook the upper flanged ends of the wall brackets snugly between the mounting plates and the canvas artwork. The canvas artwork should now be sitting securely on the wall.
6. If the canvas artwork is not quite level, small adjustments are possible by removing the canvas artwork from the wall, loosening the wall bracket screws slightly, shifting the brackets up or down as needed in their slots, retightening the screws and replacing the canvas artwork on the brackets.
7. Now that the hanging hardware is installed the security hardware, which includes the T-Head screw, can be put in place. Use a pencil to mark where the bottom mounting plate hits the wall. The T-Head screw must be accurately installed on the wall or else it will not fit into the opening on the mounting plate so be sure this pencil mark is correct.
8. Remove the canvas artwork from the wall.
9. Drill a 5/16" diameter hole at the pencil mark and gently hammer the T-Head plastic anchor provided into the drilled hole until it is just flush with the wall surface.
10. Thread the T-Head screw provided into the plastic anchor until about 3/8" extends out from the wall surface. Start the T-Head screw first by hand and complete using a Security Wrench. Align the head to a final horizontal position so that you may slide the mounting screw onto it.
11. Hang the canvas artwork on the wall brackets. The T-Head screw just installed should fall inside the slot of the mounting plate on the back of the bottom rail.
12. From the right hand side, slide the Security Wrench up underneath the bottom edge of the canvas artwork and, without lifting the canvas artwork away from the wall, engage and rotate the T-Head screw clockwise one-quarter turn to a vertical position. The canvas artwork is now locked to the wall.

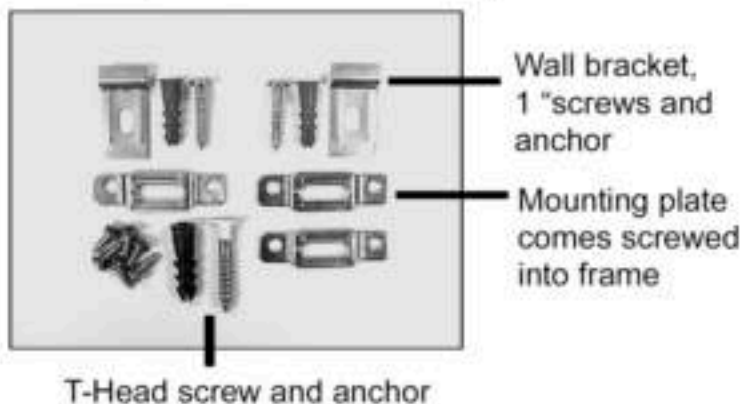

T-Head screw in
mounting plate



Security Wrench